



PEUGEOT

FITTING INSTRUCTIONS

IMPORTANT: Read all instructions carefully, prior to installation

ACRYLIC DRIVING LIGHT


APPLICATION TO SUIT

PEUGEOT 206


PART NUMBER 97121V




1. Thoroughly clean and dry the driving light before installation.

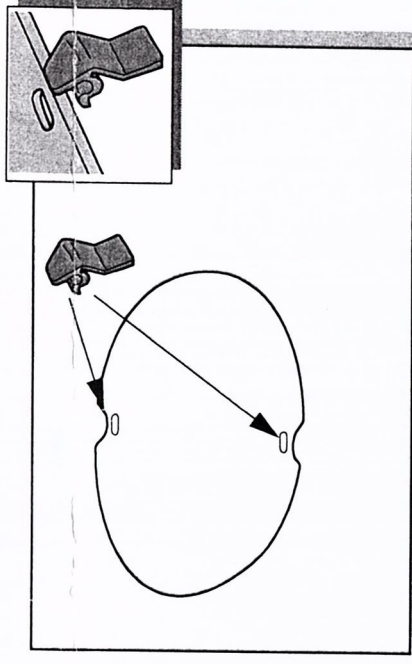

2. Note which Driving Light Cover is right and which is left, then note the slot which has "top" printed above it. Attach the supplied clips to the Driving Light Cover. Both clips should be attached such that the legs face backward to the face of the Driving Light Cover.

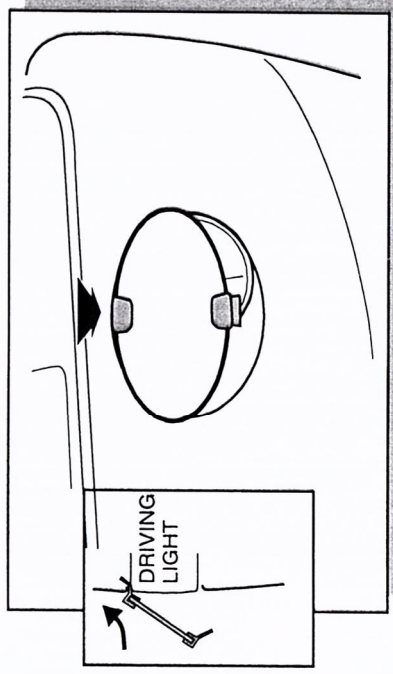


3. Hook the leg of the top clip between the driving light and the bumper, as shown.

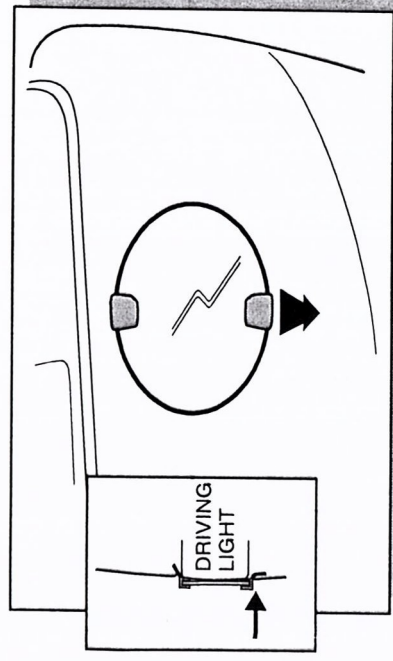

4. To complete the installation, push in the bottom clip leg between the bumper and the driving light. Ensure that the Driving Light Cover is positioned centrally on the driving light.

TO REMOVE: Reverse the above procedure.

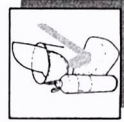

Clean DrivingLight with a mild detergent and water solution.



Do not use abrasive cleaners.